


- NOTES:
1. READ WIRE DESTINATIONS AS FOLLOWS:  
R (4)  
LINE — SCHEMATIC SHEET NO.
  2. UNLESS OTHERWISE INDICATED, RESISTANCE VALUES ARE IN OHMS, CAPACITANCE VALUES ARE IN PICOFARADS, AND INDUCTANCE VALUES ARE IN MICROHENRYS.
  3. T AND R DESIGNATIONS ON SUPPLY VOLTAGE LINES INDICATE THAT VOLTAGE IS PRESENT DURING TRANSMIT AND/OR RECEIVE.
  4. INDUCTOR AND TRANSFORMER DC RESISTANCE VALUES LESS THAN 10OHM ARE NOT SHOWN.
  5. SIGNAL PATH LEGEND:  
TRANSMIT ———  
RECEIVE - - - -  
TRANSMIT AND RECEIVE — · — · —
  6. WHEN EXTERNAL VFO IS NOT USED, JUMPER J17 PINS 2 AND 3, 6 AND 7.
  7. MIKE JACK J15 MATES WITH PLUG PL-68 OR EQUIVALENT.
  8. BAND SWITCHES ARE SHOWN AT 3.4 MHZ.
  9. A. FOUR OHM AUDIO IS COUPLED TO NB ANT J28 FOR USE WITH 351D-1 MOBILE MOUNT.  
B. REFER TO 136B-2 INSTRUCTION BOOK FOR CONNECTIONS REQUIRED AT J24-3 AND AT J26 WHEN NOISE BLANKER IS USED.
  10. S10 CLOSED AT MAXIMUM CCW POSITION OF R8.
  11. J5 AND J6 JUMPERED UNLESS VHF CONVERTERS ARE USED.
  12. J22 AND J23 JUMPERED UNLESS NOISE BLANKER IS USED.
  13. J20 AND J21 JUMPERED UNLESS EXTERNAL SWITCH IS USED TO MUTE RECEIVER.
  14. C266 IS INSTALLED IN KWM-2 ONLY.
  15. S14, S15 AND HOLDERS FOR CRYSTALS Y18 THRU Y31 ARE INSTALLED IN KWM-2A ONLY.
  16. EXTERNAL POWER CONNECTIONS MADE TO THE KWM-2/2A ARE AS FOLLOWS:

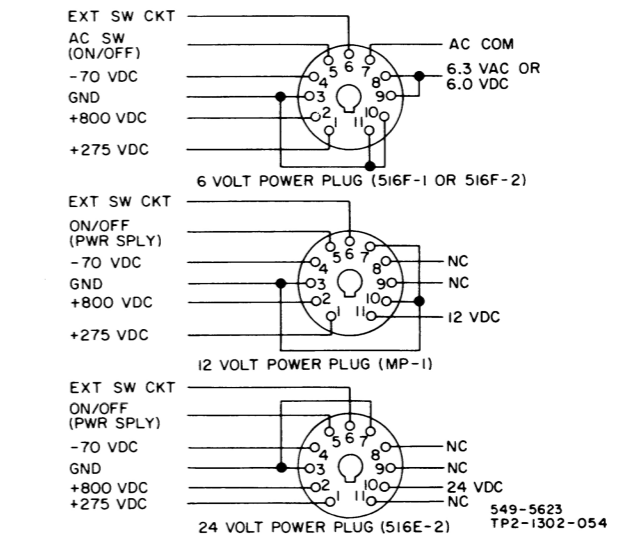

KWM-2 and KWM-2A Transceivers, Schematic Diagram  
Figure 7-1 (Sheet 5)

Revised 1 January 1978

7-21/7-22

